28 January, 2015, www.brodit.com, © 2015 Brodit AB

Product 854845

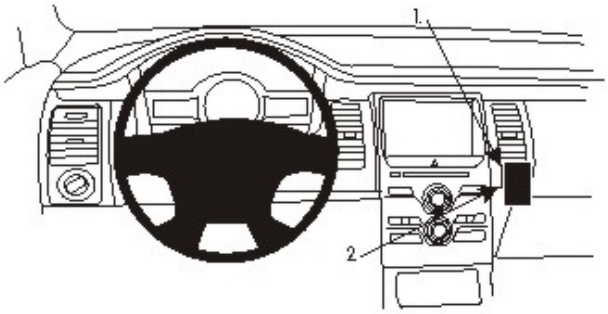

854845 ProClip

Angled mount

The ProClip is a mounting bracket for the vehicle's dashboard. Onto the ProClip you can install e.g. a holder for your mobile phone or PDA or a handsfree set etc. Safe and convenient -always within easy reach. The ProClip is car specific and easy to install. The installation is quick, no special tools or dismantle of the dashboard is required and it will not damage the interior of the vehicle. Made in black ABS plastic. Comes with detailed instructions.

EAN: 7320288548456

Item no 854845 fits:
Ford Flex 13-15 (For all countries)

INSTALLATION INSTRUCTIONS

1.

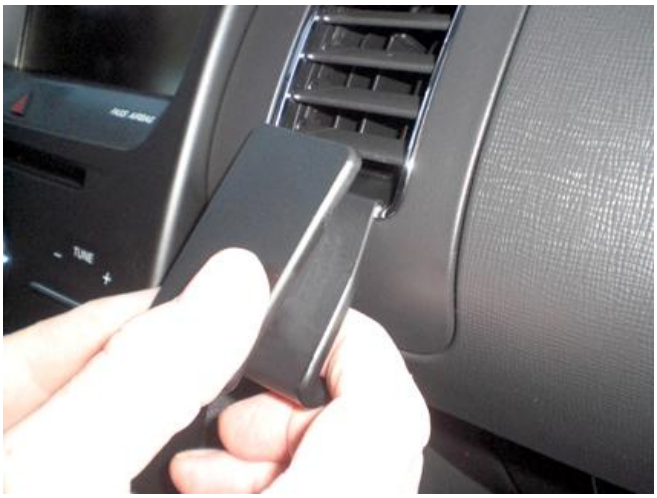

2.

3.

4.

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Hook the U-shaped edge on the upper part of the ProClip around the lower air vent edge. Pull the ProClip downward so it attaches properly.

2. Position the the grooved edge on the lower part of the ProClip against the seam/gap below the air vent.

3. Press firmly forward on the lower part of the ProClip so the grooved edge goes into the seam/gap. Press until you see or hear/feel it click into place.

4. The ProClip is in place.